

LOMBOK


LUMIO

48 inch (1250mm) 3 blade 40W DC ceiling fan - Black

SAFETY INFORMATION

- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- An all-pole disconnection switch must be incorporated into the fixed wiring, in accordance with local wiring rules.
- The structure to which the fan is to be mounted must be capable of supporting a weight of 30kg.
- The fan should be mounted so that the blades are at least 2.1 m above the floor in Australia & New Zealand.
- This fan is suitable for indoor, alfresco and coastal areas where the fan is fully undercover with a minimum of 1 wall. This fan is not waterproof. When installed in an alfresco or coastal area, the ceiling fan must be positioned in a location protected from water, wind and dust. Exposure to these elements will void the warranty. Mounting the fan in a situation where it is subject to water or moisture is dangerous and may increase the risk of damage, injury or electrical shock and will void the warranty.
- Must be assembled and installed by a licensed electrician.
- The replacement of parts of the safety suspension system device shall be performed by the manufacturer, its service agent or suitably qualified persons.
- The fixing means for attachment to the ceiling such as hooks or other devices shall be fixed with a sufficient strength to withstand 4 times the weight of the ceiling fan; that the mounting of the suspension system shall be performed by the manufacturer, its service agent or suitably qualified persons.
- Fitting must be installed as per AS/NZS3000 regulations.
- Wiring must be completed by a qualified electrician.
- Ensure all electrical connections are secure and that there are no loose strands.
- Only the screws supplied with this product must be used. If alternate screws or fixings are used, they must be of the same type as the supplied screws/fixings. Do not use countersunk screws.
- WARNING: If unusual wobbling or oscillating movement is observed, immediately stop using the ceiling fan and contact the manufacturer, its service agent or suitably qualified persons.

Product Dimensions

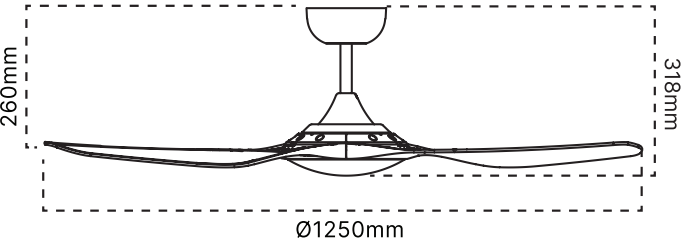

Product Specifications

Voltage	220-240V~ 50Hz
Power consumption	40W
Electrical classification	I
Motor	Ø153x8mm DC motor
IP rating	IP20
Blades	3
Blade pitch	13°
Airflow	14000m³/hr (max)
Max ceiling rake	15°
Control	DC remote control
Speeds	12
Body material	ABS
Blade material	ABS
Warranty	6 years (4 years in-home + 2 years return to base)
Weight	4.1kg

Product Range


Name	Code	SKU	Finish	Fan size
LOMBOK	1124044	11758	Black	48" (1250mm)

Installation Steps


To ensure correct function and safety, please read and follow all instructions carefully before assembly, installation and use of this ceiling fan. Please keep instructions for future reference. Isolate the mains power supply before commencing installation. Before commencing, check space for obstructions and ensure adequate clearance for installation (see clearance table).

1. Install the hanging bracket to the ceiling joist or structure that is capable of carrying a load of at least 30kg, with two long screws provided. Ensure at least 30mm of the screw is threaded into the support. NOTE: The bracket screws provided are for use with wooden structures only. For structures other than wood, the appropriate screw type MUST be used. Ensure the screws used are suitable for the mounting surface and the surrounding environment.

2. Connect the mains power supply to the terminal block as shown in diagram below and in accordance with AS/NZS 3000 Wiring Rules.
3. Install blades by aligning the 3 holes on the blade with the 3 holes on the rotating section of the fan motor assembly and securing using the 3 blade screws. Ensure all screws are tightened evenly to reduce the chance of warping or unbalancing. Take care not to over tighten the screws, as this can damage the blades.
4. Lift the fan assembly onto the mounting bracket. Ensure the key slot (A) of the hanger ball is positioned on the key pin (B) of the mounting bracket to prevent the fan from rotating when in operation.
5. Insert the DC remote receiver into the mounting bracket. **Attention:** do not cut or attempt to change the length of antenna cable.
6. Join the quick connector cabling attached to the terminal block on the hanging bracket to the corresponding connector on the DC receiver (see receiver wiring).
7. Cover the mounting bracket with the canopy. Ensure all electrical wiring is tucked inside the canopy and that the wires are not damaged during this step. Secure the canopy to the hanger bracket using the screws provided.

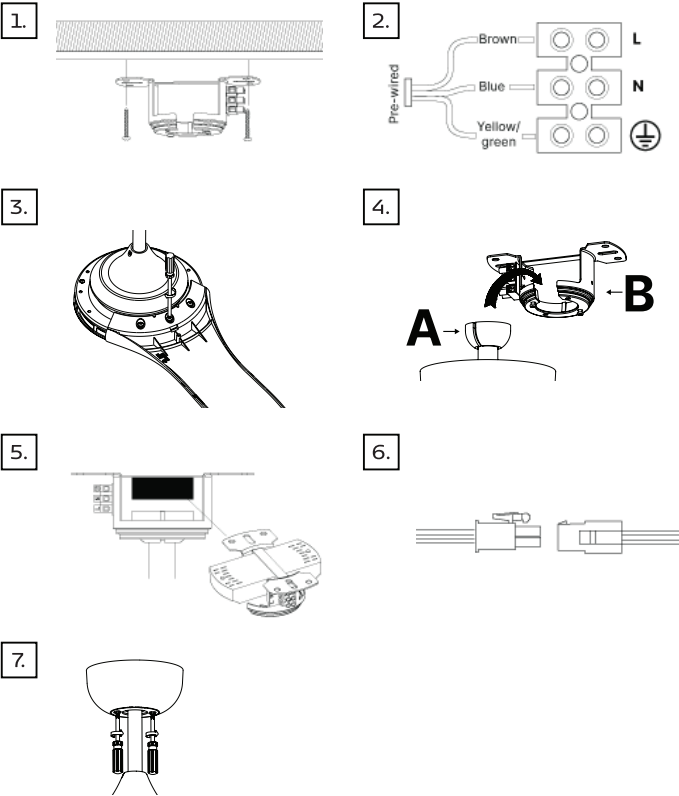


Wiring

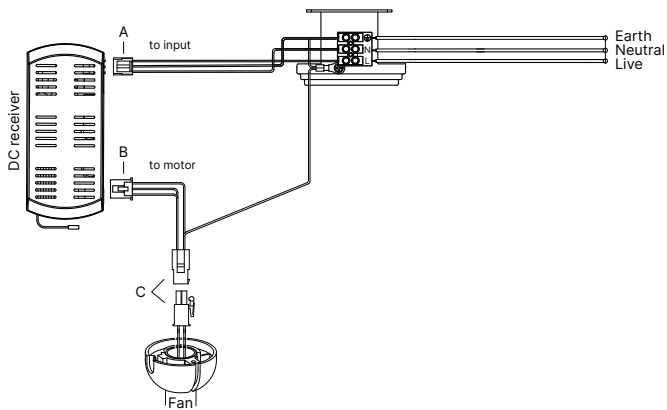

1. Connect the mains power supply to the terminal block. Live to "L" terminal, Neutral to "N" terminal Earth to $\oplus$ terminal. Ensure the wires are secure and no bare wires are exposed.
2. Insert the DC remote receiver into the hanging bracket.
3. Insert the 3-port fixed wire quick connector (A) to the receiver power input socket.
4. Insert the 3-port DC motor output wire connector (B) to the receiver power output socket.
5. Insert the DC motor input wire connector (C) to the receiver motor power output socket.

Safety Clearances

Wall* (from blade tip)	300mm
Floor (from blades)	2.1m (minimum)
Angle	15° max

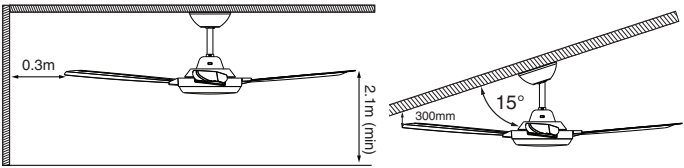

Commissioning

1. Run fan in all speeds and directions and check for noise and wobble.
2. Check all operational functions.
3. Run ceiling fan for 24 hours to bed-in (12 hours in summer mode and 12 hours in winter mode).

Outdoor Operation

This fan is suitable for protected and covered outdoor alfresco areas. Installation location include one wall and must be protected from dust, wind, rain and salt spray. Failure to meet these requirements will void warranty. Ceiling fan must be installed so that the edge of the blades is at least 1.5m away from the edge of the protected area (or eave). Damage and failure through the actions of wind, water and dust ingress or salt spray are not covered by warranty.

Reversing Airflow

This ceiling fan can operate in either summer or winter mode. Use the "forward/reverse" button on the remote to switch between summer and winter mode.

SUMMER Mode: The fan will rotate in an anticlockwise direction. The airflow will be directed downwards, for cooling in summer.

WINTER Mode: The fan will rotate in a clockwise direction. The airflow will be directed upwards assisting in the circulation of warm air, for energy conservation in winter.


Pairing the Remote

The remote and receiver have already been paired during manufacturing. When the ceiling fan is installed for the first time, pairing of the remote and receiver is NOT required. If the remote and receiver lose pairing after installation or during use, the remote and the receiver must be re-paired.

1. Switch OFF the main power to ceiling fan for at least 1 minute to discharge the unit.
2. Press and hold the "Fan" button on the remote for 5 seconds (within 30 seconds of switching the power ON to the receiver of the ceiling fan). A long "beep" sound to indicate the pairing process is activated. Release your finger from the FAN ON/OFF button.
3. Turn the fan ON and change the speed of the ceiling fan by the remote to check the operation and successful pairing.

Remote Control

1. Fan ON/OFF
2. Light ON/OFF
3. Natural Wind mode ON
4. Decrease light brightness
5. Increase light brightness
6. Switch fan direction
7. Timer buttons
8. Speed Control buttons - 12 speed settings, 1 being lowest and 12 being highest

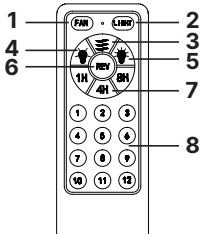

Care & Maintenance

- Every 6 months periodic cleaning of your ceiling fan is the only maintenance required. Use a soft brush or lint free cloth to avoid scratching the paint finish. Please turn off electricity power when you do so.
- Do not soak or immerse your ceiling fan in the water or other liquids. It could damage the motor or the blades and create the possibility of an electrical shock.
- Ensure that the fan does not come in contact with any organic solvents or cleaners.
- To clean the fan blade, wipe with only a damp clean cloth with NO organic solvents or cleaners.
- The motor has a permanently lubricated ball bearing so there is no need to oil.

NOTE: Always turn OFF the power at the mains switch before performing any maintenance or attempting to clean your fan.

Troubleshooting

Wobble: Ceiling fans tend to move during operation due to the fact that they are mounted on a rubber grommet. If the fan was mounted rigidly to the ceiling it would cause excessive vibration. Movement of a few centimetres is quite acceptable and DOES NOT suggest any problem.

Noise: When it is quiet (especially at night) you may hear occasional small noises. Slight power fluctuations and frequency signals superimposed in the electricity for off-peak hot water control, may cause a change in fan motor noise. This is normal. Please note that this is not a product fault - All electric motors are audible to some extent.

Please allow a 24-hour "breaking-in" period, most noises associated with a new fan disappear during this time.

Standard wear and tear: All ceiling fans are subject to standard wear and tear as the product ages through use. This is normal and will not constitute a product failure under warranty. Defects, wobble and noise caused by impacts, external damage and lack of regular maintenance are excluded from warranty.

Beep: When the fan starts up and is in normal operating condition it will beep once. If the receiver detects a problem after this beep, it will emit a beep code to indicate a fault (see codes below). In the event of an error state that cannot be resolved, contact support.

Start-up:

1 beep: Fan in normal operating condition

After start-up:

1 beep: Undercurrent detected (software limit)

2 beeps: Undercurrent detected (hardware limit)

4 beeps: Undervoltage detected

5 beeps: Overvoltage detected

6 beeps: Wiring fault detected (Note: Check all the interconnector wiring. Ensure the contact is good and that the colour match)

See separate leaflet for warranty.

Images are for illustrative purposes only.
Due to changes in industry standards and continual product development, product specifications are subject to change without notice.

For sales and product information telephone
Customer Service: 1300 438 658
New Zealand: 0800 235 867

Website: lumio.com.au